


Bathrooms

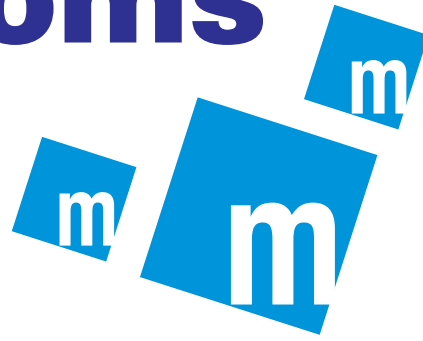

How to use Marmox boards in bathrooms?

ENCLOSING BATH TUBS

Enclosing bath tubs could be frustrating and time consuming for tilers. With Marmox boards the job can be done in 4 easy steps.

PROCEDURES

Measure two sides of the tub to be enclosed. Cut the boards to suit.

Mark location of **WBs** (wall brackets) on the floor allowing for thickness of tile, adhesive and 30 mm board.

Use brackets (**WB** on sides and floor, **PB** to hold the sides together at 90°).

For waterproofing apply silicone to all edges of the panels.

Apply fibreglass tape embedded in flexible tile adhesive to all joints.

When dry the surfaces are ready for tiling.

